


**Removal**


---

1    Unscrew outer screw on cover under instrument panel.


2    Push the two clips on cover toward the rear by means of a plastic wedge and lower cover.

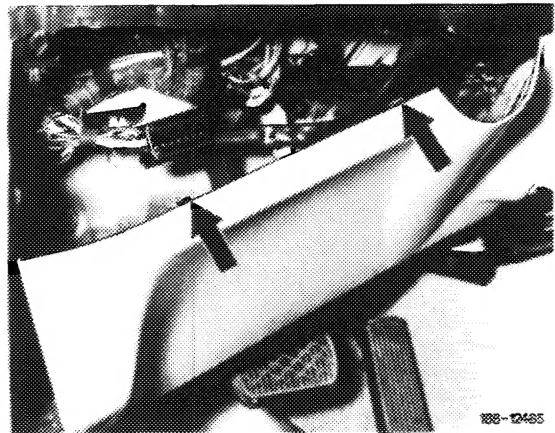


3    Unscrew both screws on handle.

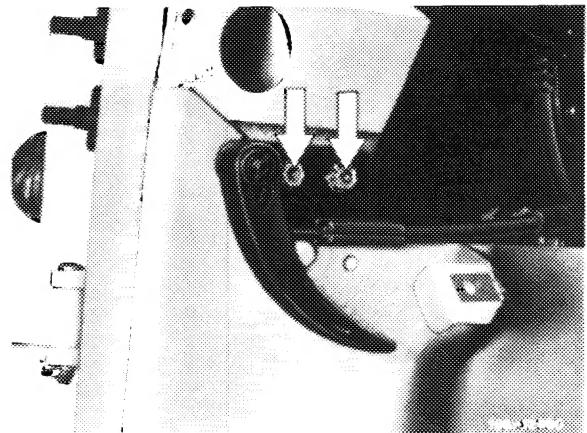


4    Disconnect hood cable control on handle.

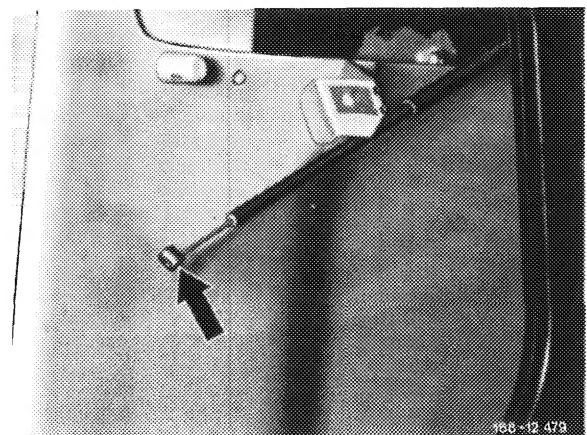

5 Pull cable control out of bracket on wheel house and loosen plastic tape.

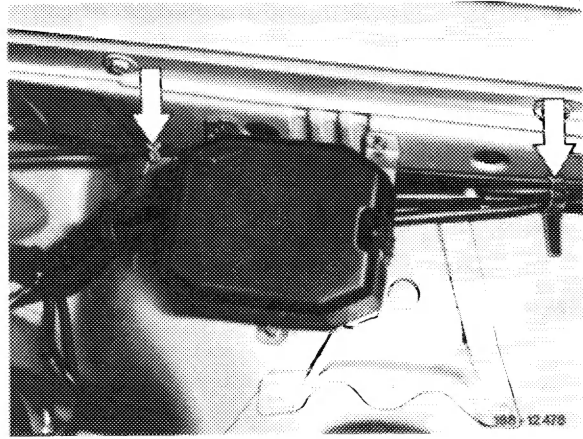


6 Pull hood cable control out of clips under radiator reinforcement.

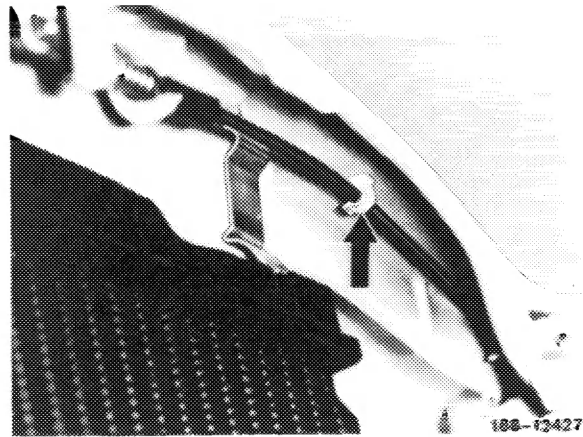

7 Loosen counter-nut and push pin of clips out of lower half of lock.

8 Pull out hood cable control in forward direction.

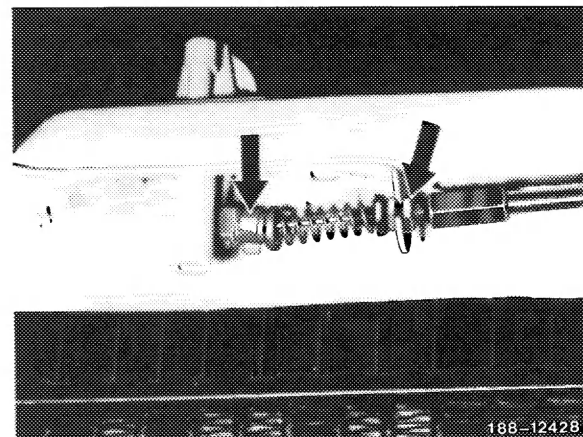

## Installation

---

9 For installation proceed vice versa while adjusting hood cable control at lower half of lock free of play.